


www.thepelmetcompany.co.uk
Pelmet Fitting Instructions




You will find 2 Disc Magnets fitted to the underside of the top of the pelmet, these are designed to hold the pelmet on the L shaped brackets once fixed to the wall.

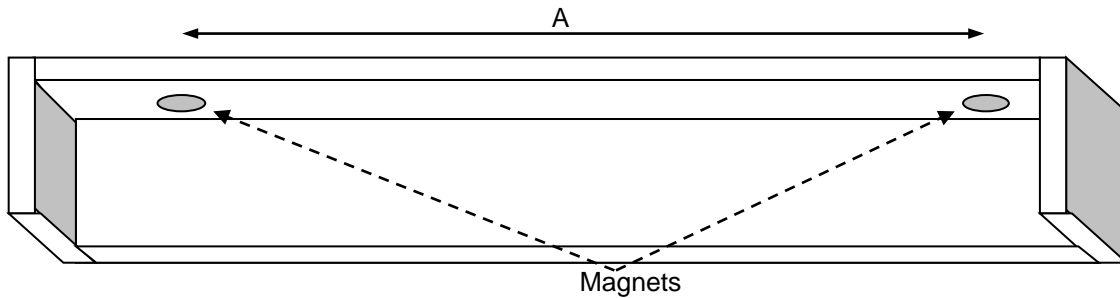


A Distance between center of magnets.

To fit the L shaped brackets take the measurement between the center of the 2 magnets (A). This is the distance required between the centers of the 2 outer L shaped brackets. These should be fixed before the position of any blind/track fixing points as these can be easily adjusted to suit.

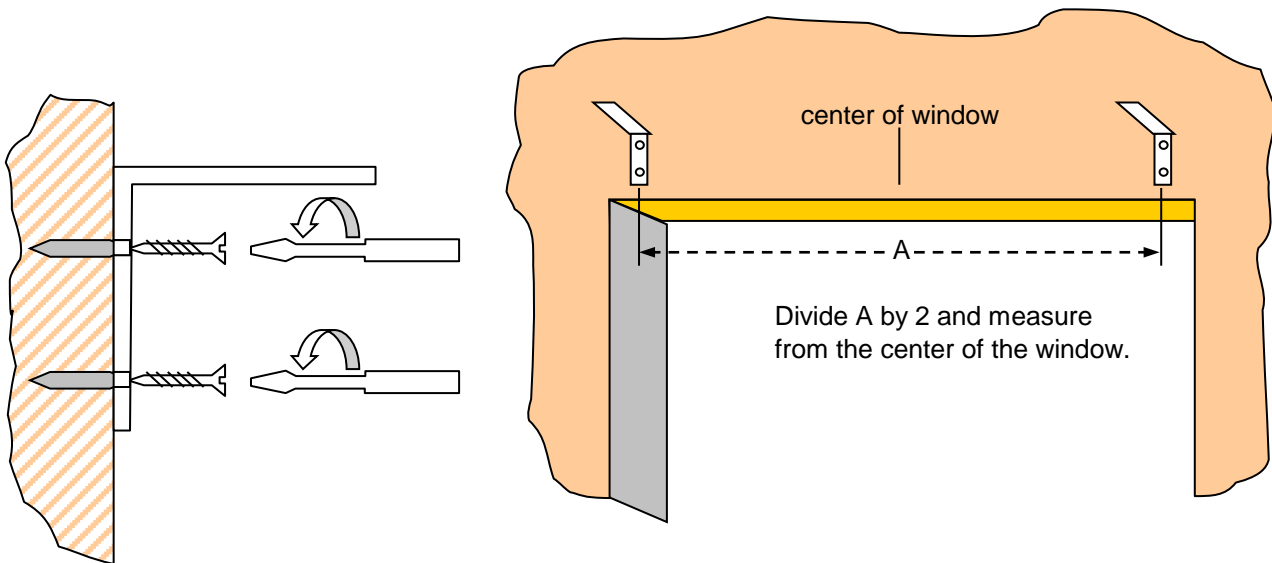

The blind/track can then be fitted in front of the pelmet brackets. Be sure to allow enough room for the curtain heading to fit below the pelmet bracket and if a roller blind that blind is fully rolled when fitting.

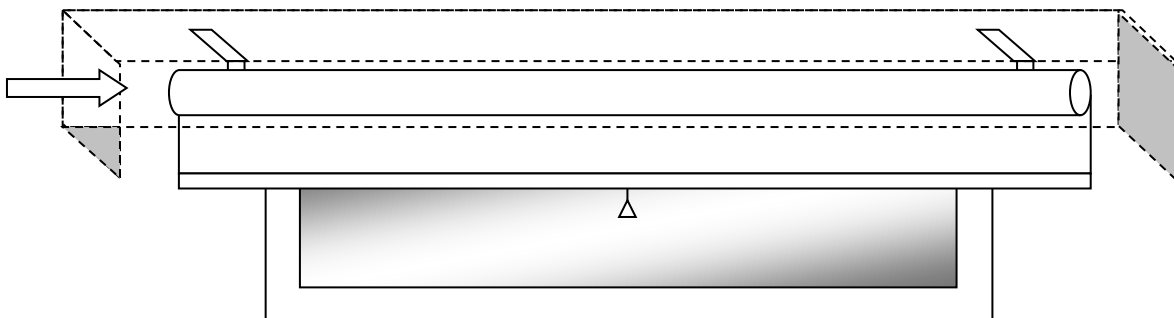

Your pelmet can then be easily slid into place and attached to the L shaped brackets.

N.B. The pelmets are designed to sit naturally on top of the L Brackets and not designed to carry curtain tracks or blinds.